


Installation Instructions:



Thank you for choosing JPeggz



Hold the JPegg parallel to the door jam and line the threaded splines up with the hinge barrel. The back anchor pin lines up just behind flange.

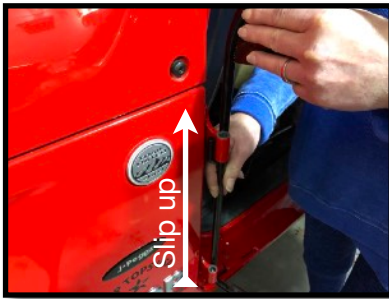

Slip the threaded spline up into the hinge with the anchor pin on the backside. Hold in place while you get ready to put on the hinge nuts.



Place the hinge nut onto the threaded spline and spin it on. Use your fingers only! It will easily thread on to the spline. THEN JUST SPIN ON UNTIL IT'S FINGER TIGHT... Repeat the process on the lower hinge.

RIGHT HAND

LEFT HAND



Using the Jeep Ratchet and Torx 50 Bit that comes in the tool kit with the Jeep (or your own) now tighten the nut firmly.

Now Rest Eazy / See Eazy...

